





Rear Sled Hitch Receiver Instructions Item 200064 (0403)

1. At the rear of the Otter Pro sled measure down 7" from the underside of the lip at the approximate center. For the Otter Wild sled measure down 8". Place a mark at this spot. Now measure the width of the sled where the mark is and mark the center point. In this case the sled is 32" wide, 7" down from the lip, so the center point is at 16".

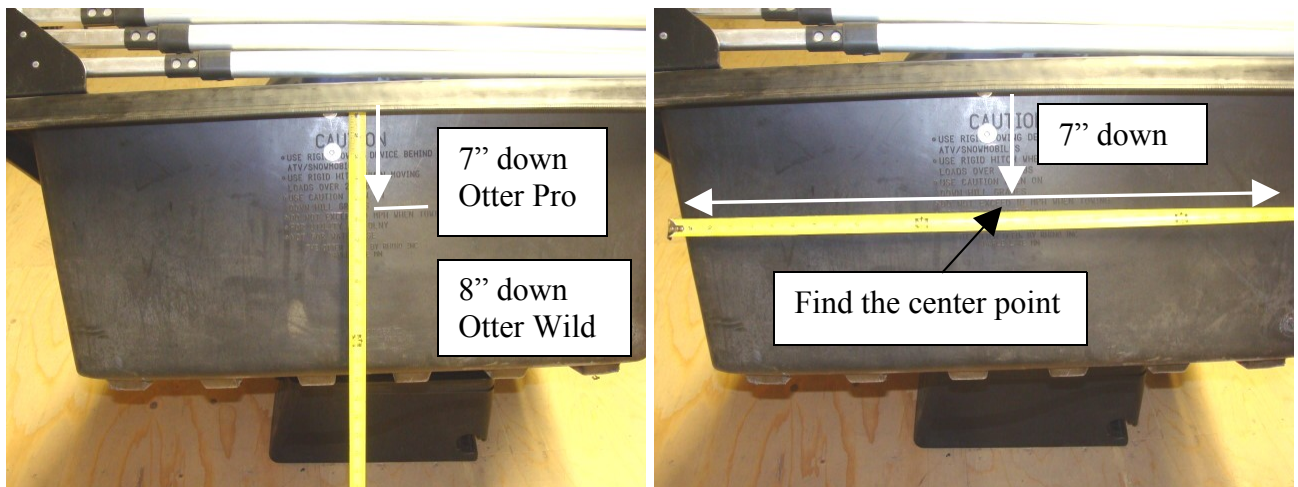

2. From the center point measure 3/4" to the left and place a mark. Drill a hole at that mark using an 11/32" drill bit or just over 5/16". Place the hitch receiver into position and put a 5/16 bolt through the receiver and the hole. Lightly tighten into place. Make sure the receiver is level and then drill out the second hole.

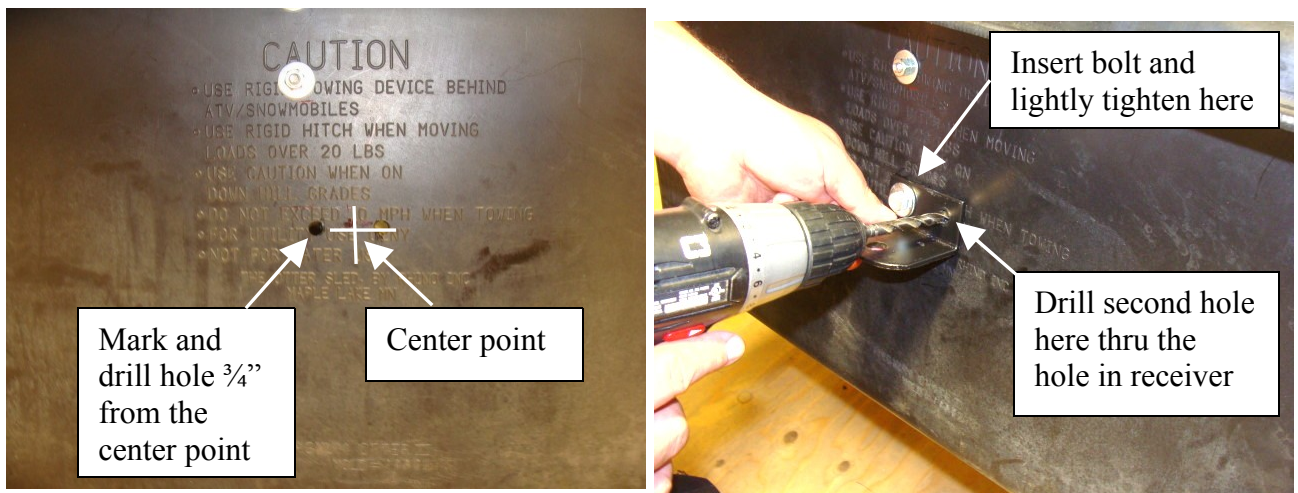

3. Remove the bolt from the receiver and line up the inside backing plate with the holes in the sled and the holes in the receiver. Insert the bolts and washers through the inside plate and the receiver and tighten down using the nylock nuts.

